


**Q: The power is on but the LCD does not work.**


**A: Please turn off the machine and re-insert the SD card.**

< How to re-insert SD Card > (Cover with tape)

1. Remove the Mylar tape on the REAR COVER left.

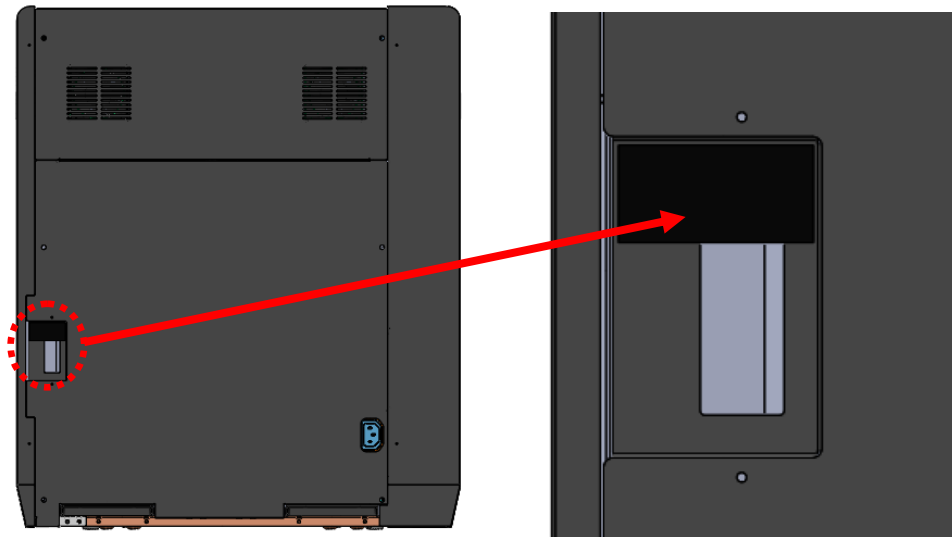


2. Unmount SD Card by pushing it and pull out the SD card.

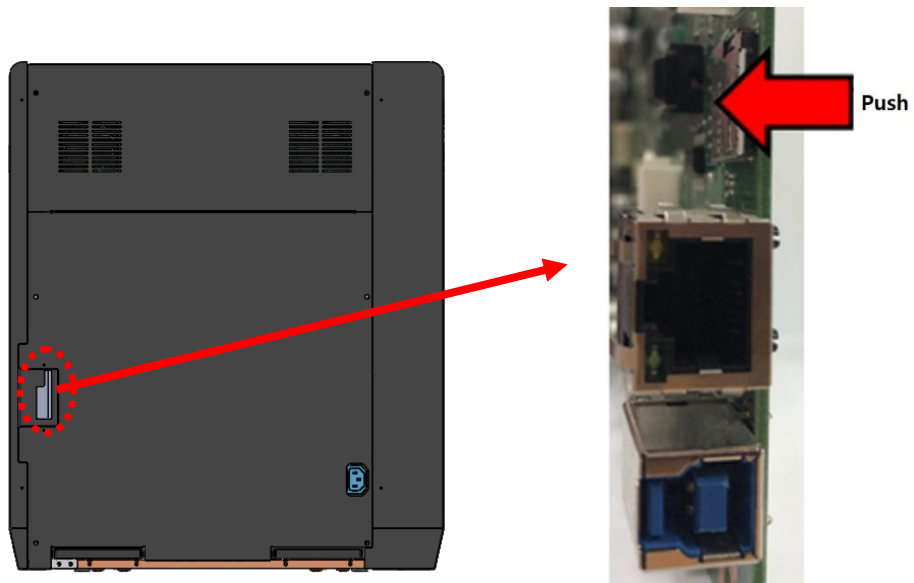

3. Re-insert the SD Card in parallel with the slot. Push the SD Card slightly to mount.



4. After the SD Card mounting, reattach the Mylar tape on the original position.

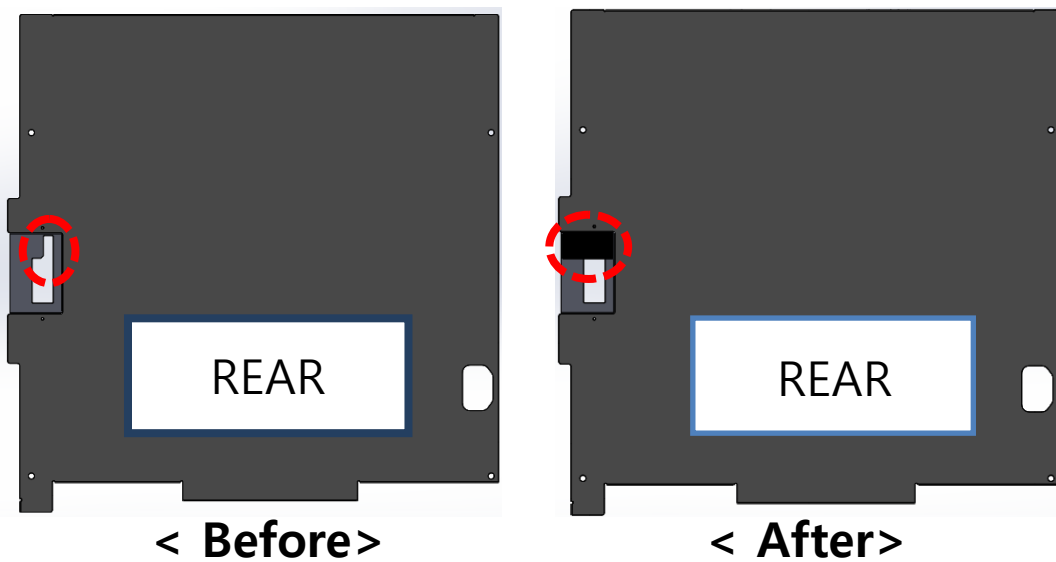

5. Turn on the power and check that the LCD turns ON.